



- FLEXIBLE MEMBRANE
F.R. 40 OR EQUAL

457

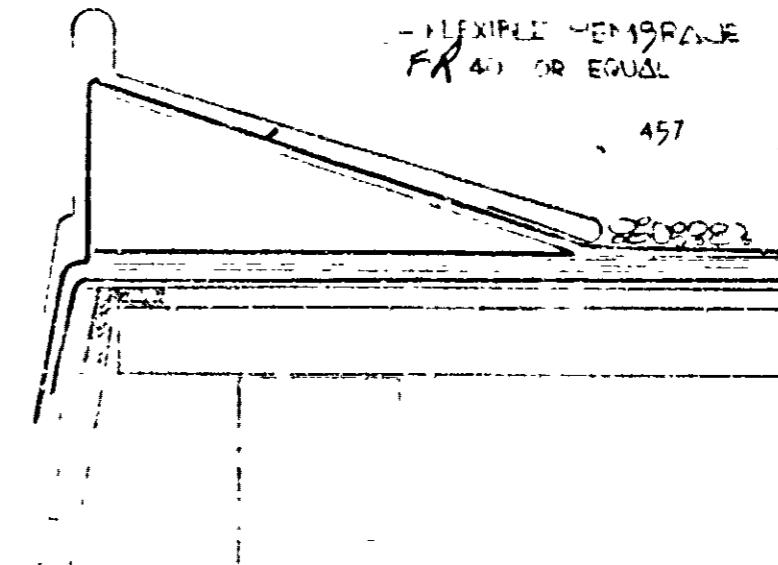

PROPOSED INSTALLATION OF FLEXIBLE MEMBRANE


DETAIL "A"

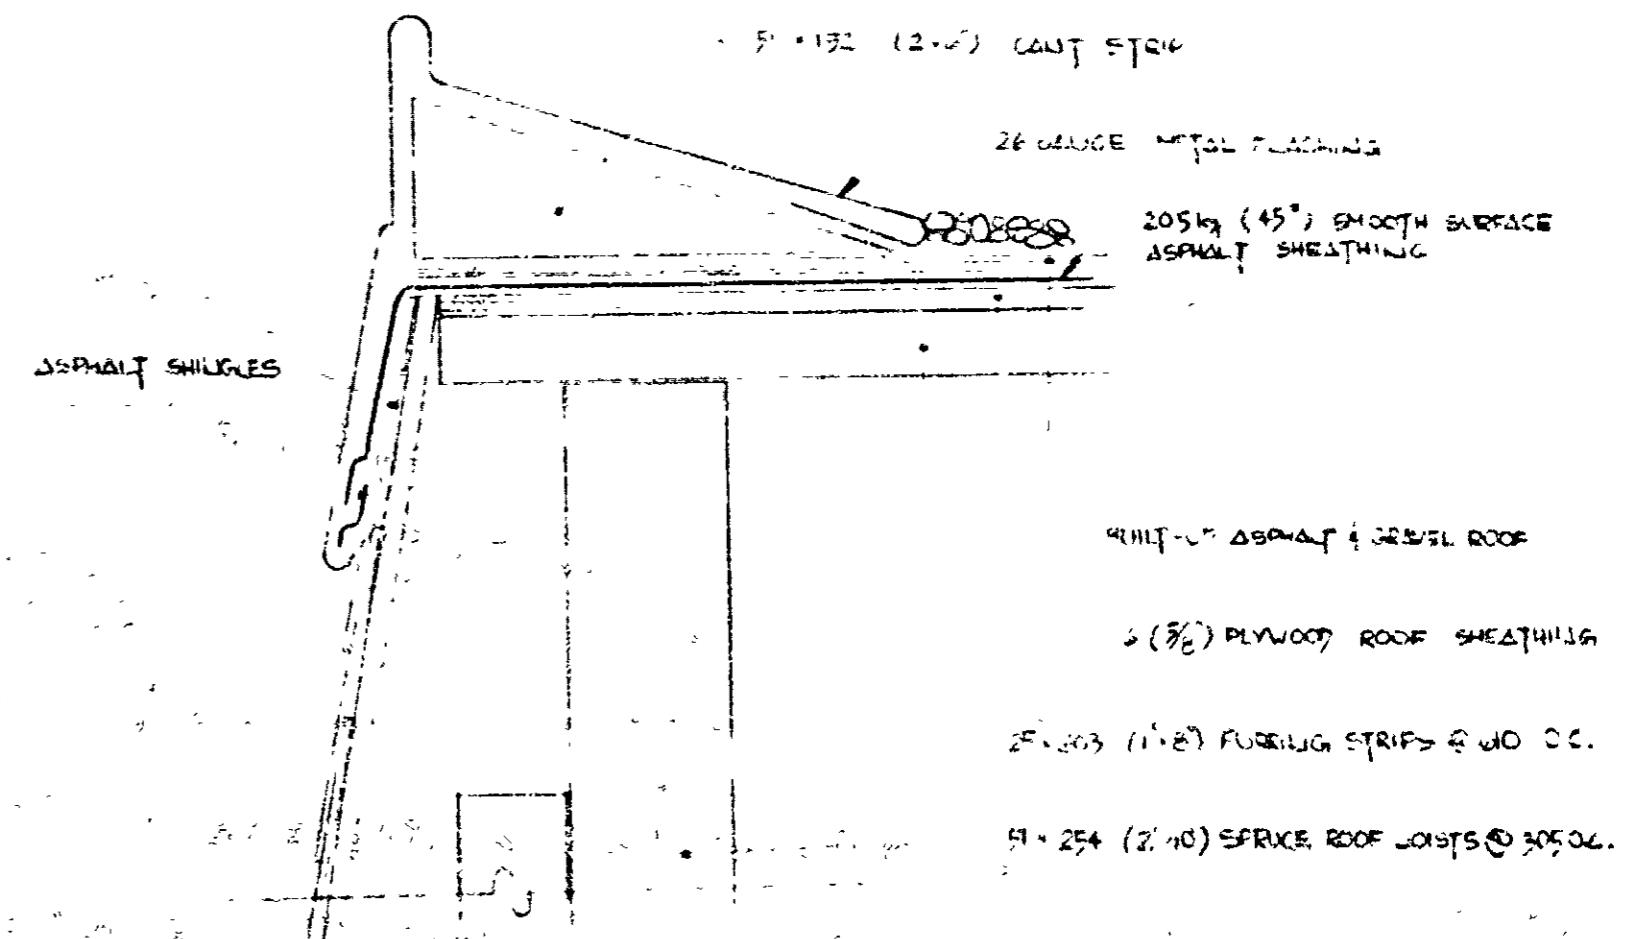

Notes


1. Remove existing Metal Flashing from Perimeter of Roof.
2. Scrape off existing gravel for 610mm(2') around Perimeter of Roof.
3. Install Lexanex F.R. 40 914mm (3') wide as per detail "A" and manufacturer's directions.
4. Install new prefinished 26 gauge Metal Flashing on Perimeter Gants as per detail "A".
5. Re-install gravel in hot membrane around Perimeter of Roof.

- EXIST DETAIL

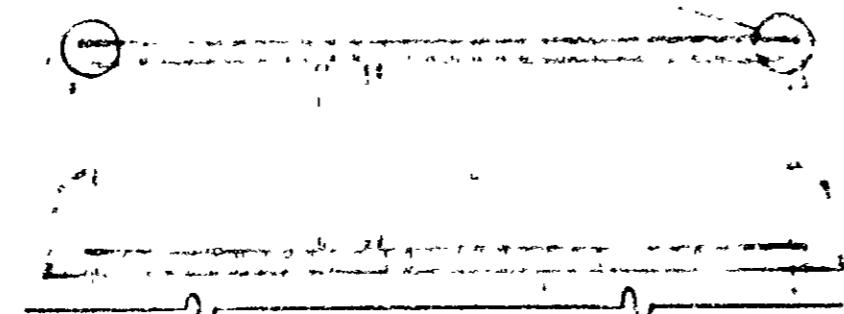

SECTION THROUGH ROOF - TYP.

- 3108 - R 01 -

ONTARIO HOUSING CORPORATION			
MAINTENANCE ENGINEERING BRANCH 101 BLOOR STREET WEST TORONTO M7A 2P9 ONTARIO			
Title ROOF REPAIR		Drawing # 78-348-B	
Project Address 30 ALEXANDER AVE., PETERBOROUGH			
Scale U.T.S.	Checked By A.B.S.	Project # 04-9	
Drawn By 	Date FEB. '78		